

Instructions for installation
3-Way Mixing Valve Mounting Instructions

Factory Shipped


Valve is mounted to the **Left** of the Boiler

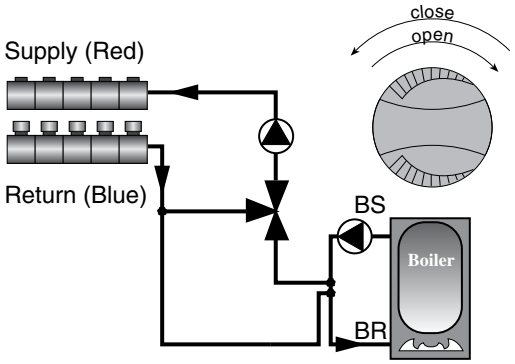

Closed

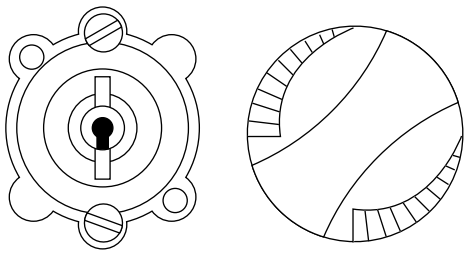


Open

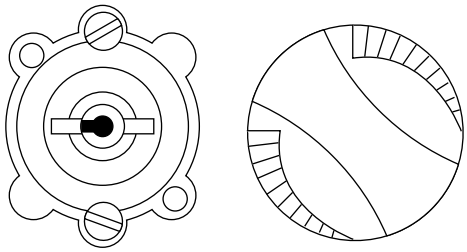


Alternative Option 1


Valve is mounted to the **Left** of the Boiler

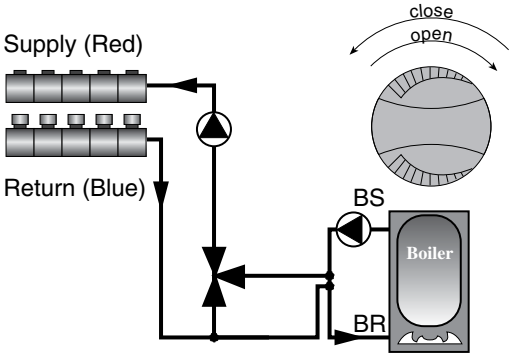


1) Turn mixing valve handle so that the mixing valve is closed. Remove the mixing valve handle.

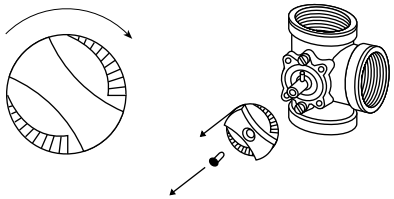


2) Rotate the mixing valve handle 45° clockwise and reattach the handle.

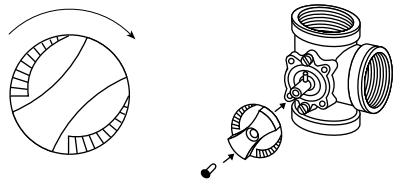

Closed

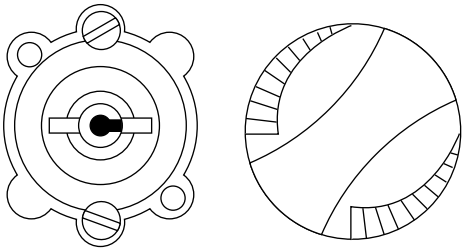


Open

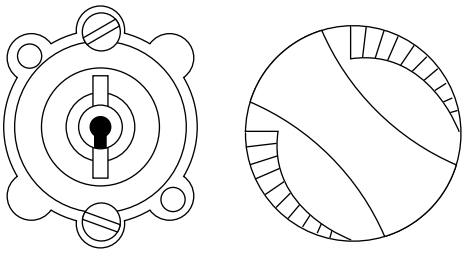


Instructions for installation
3-Way Mixing Valve Mounting Instructions

Alternative Option 2


Valve is mounted to the **Right** of the Boiler

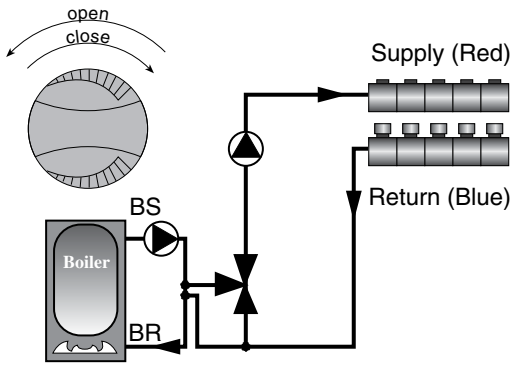


1) Turn mixing valve handle so that the mixing valve is closed. Remove the mixing valve handle.

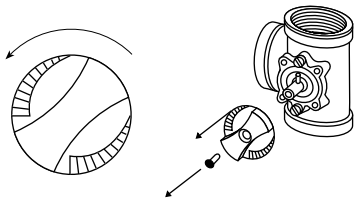


2) Rotate the mixing valve handle 180° clockwise and reattach the handle.

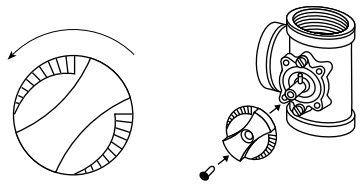

Closed

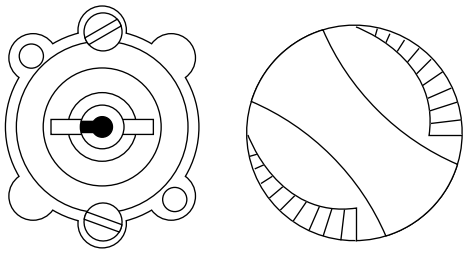


Open

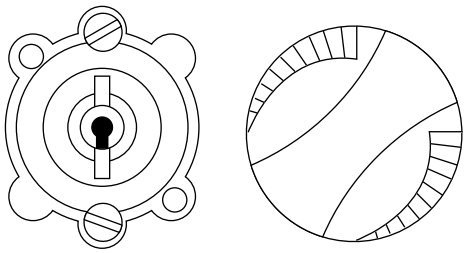


Alternative Option 3


Valve is mounted to the **Right** of the Boiler

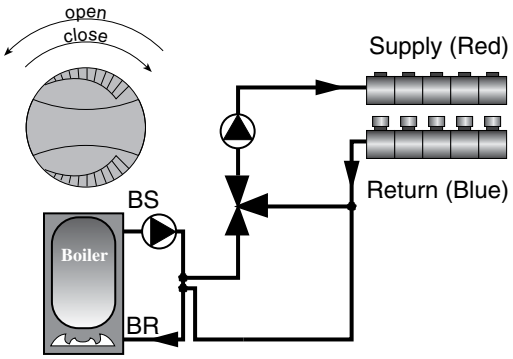


1) Turn mixing valve handle so that the mixing valve is closed. Remove the mixing valve handle.

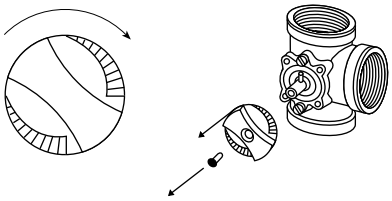

2) Rotate the mixing valve handle 90° counterclockwise and reattach the handle.

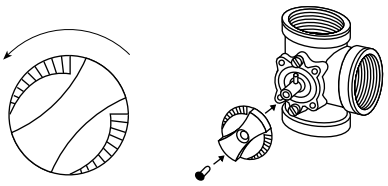

Closed

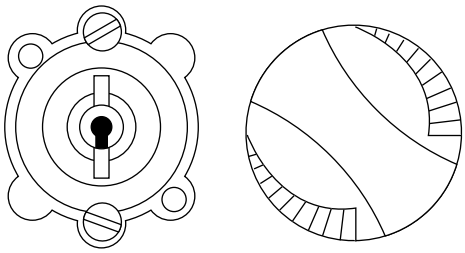

Open

